

0400-01

Fireray® 50/100RU LLC Remote Test Station

By a simple key operation the Remote Test Station is able to test the alarm function of the Fireray® 50RU or 100RU Reflective Beam Smoke Detectors at ground level. Initiating the process will start the green LED periodically flashing, indicating that the Fireray® 50RU or 100RU Reflective Beam test is "Live", and the 2 wire "Data Link" cable has been correctly installed.

The green LED will continue to flash during the entire time that the key is in the "Test" position. While the green LED is flashing, the detector will automatically begin a test sequence that will result in the Fireray® 50RU or 100RU Reflective Beam "electronically" simulating an "Alarm" condition.

When this condition is reached, the "Alarm" contact on the detector will be toggled, which will be indicated by the Red LED being illuminated on the Fireray® 50RU or 100RU detector. This will in turn illuminate the Red LED on the LLC Remote Test Station and also create an "Alarm" on the main Fire Panel. Should the LLC Remote Test Station remain in "Test" mode for longer than 20 seconds, the Fireray® Reflective Beam Detector will automatically revert back to normal operating mode. The Red "Alarm" LED on the LLC will remain illuminated until the Key has been turned to the "Run" position.

Features

- Compatible with either Fireray® 50RU or 100RU
- Reflective Beam Smoke Detectors
- Mounts to a standard single gang electrical box
- Stainless steel wall plate
- 7" pigtail leads
- Includes Data Link cable assembly
- A-126 key lock
- 3 Year warranty



Listings

- UL Listed
- ULC Listed
- MEA 76-04-E
- CSFM 7300-1508:103

Technical Specification

| Operating Voltage: | 10.2 to 30 V DC |
|---------------------|------------------------------|
| Standby Current: | 0mA @ 24V DC |
| Alarm Current: | 8 mA @ 24 V DC |
| Temperature Rating: | 32°F to 100°F (0°C to 38°C). |
| Relative Humidity: | 10% to 93% RH non-condensing |
| Weight: | 6 oz. (170g) |

Ordering Information

LLC: Remote Test Station (0400-01)

0400-0




Wiring Connection Chart

| | Fireray [®] 50RU/100RU | | | | Junction Box | Low Level Controller | |
|-----------------|---------------------------------|------------|-------------|----------------|--------------|----------------------|-----------|
| | Pin No. | Wire Color | Function | Operation | | Wire Color | Wire Ref. |
| 8-way Connector | 8 | | Spare | | | | |
| | 7 | White | Trouble Com | Fire Alarm | | | |
| | 6 | Green | Trouble N/C | Fire Alarm | | | |
| | 5 | Black | Power -VE | Fire Alarm/LLC | Connect | Black | D |
| | 4 | Red | Power +VE | Fire Alarm/LLC | Connect | Red | С |
| | 3 | Yellow | Alarm N/O | Fire Alarm | | | |
| | 2 | Blue | Alarm Com | Fire Alarm | | | |
| | I | | Spare | | | | |
| 2-way Conn | | Blue | | Communications | Connect | Blue | В |
| | | Yellow | | Communications | Connect | Yellow | А |


Remote Test Station LED Logic

| Function | Red LED | Green LED | Beam Detector - Latching | Beam Detector - Non Latching | FACP |
|-------------------------|---------|-----------|-----------------------------|---------------------------------|-----------|
| Run | OFF | OFF | QUIESCENT | QUIESCENT | QUIESCENT |
| Key Switch to "TEST" | OFF | FLASH | QUIESCENT | QUIESCENT | QUIESCENT |
| Wait a short while | ON | FLASH | FIRE | FIRE | FIRE |
| After additional 20 sec | ON | FLASH | FIRE | QUIESCENT | FIRE |
| Run (After Test) | OFF | OFF | FIRE | QUIESCENT | FIRE |
| Reset FACP and Beam | OFF | OFF | QUIESCENT | QUIESCENT | QUIESCENT |

Wiring Connections

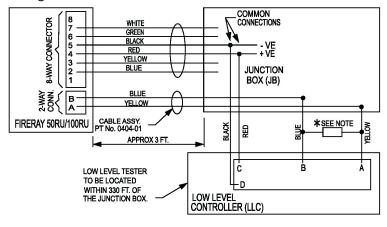

Dimensions

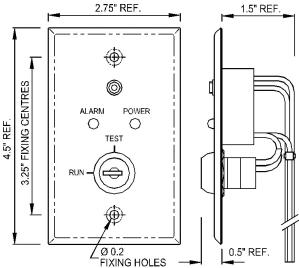



FFE Ltd 1455 Jamike Ave Ste 200, Erlanger KY 41018-3147 USA

t 940 271 0435

f 972 534 1526

e america@ffeuk.com

w www.ffeuk.com

* **NOTE:** Fit resistor supplied (150 Ohm) across 'Yellow' and 'Blue' communications lines by LLC. The use of the resistor is not essential for short cable runs, but if greater than 20m (60ft), use of the resistor may be required. It will do no harm if the resistor is fitted on all installations.

Specifications and wiring information are provided for information only and are believed to be accurate. FFE Ltd assumes no responsibility for their use. Data and design are subject to change without notice. Installation and wiring instructions are shipped with the products and should always be used for actual installation. For more information, contact your Sales Representative.

Document Part No: 24-0033-04