

INSTALLATION GUIDE ENGLISH v1.2

code: RS1566GD

Name: RACK cabinet, floor standing, ready-to-assemble 15U/600x600



IM RS1566GD

Edition: 4 from 25.09.2017 Supersedes: 3 from 25.02.2016

EN*


1. Intended use:

The RACK 19" cabinet enables integrating CCTV, AC, I&HAS, RTV, LAN, or other systems in medium and big companies. It is intended for devices manufactured in enclosures of the 19" standard. Due to the RACK cabinets, the devices are aesthetically mounted and protected against mechanical damage.

2. Specifications:

| SPECIFICATIONS | | | | |
|-------------------------|--|--|--|--|
| Mounting dimensions: | W=19", H=15U, D=397mm | | | |
| External dimensions: | W=600, H=855, D=600 [mm, +/-2] | | | |
| Net/gross weight: | 56 / 62,6 [kg] | | | |
| Materials: | - RACK mounting rails: cold-rolled steel SPCC 2mm - bolted - horizontal mounting rails: cold-rolled steel SPCC 1,5mm - bolted - frame: cold-rolled steel SPCC 1,2mm RAL 9004 - welded - front door: 5mm toughened glass / SPCC 1,2mm RAL 9004 - hinged - side panel: cold-rolled steel SPCC 1,2mm RAL 9004 - removable - rear door: cold-rolled steel SPCC 1,2mm RAL 9004 - hinged | | | |
| Static load: | 800 kg (with leveling feet) | | | |
| Use: | inside, IP20 | | | |
| Notes: | - adjustable distance between front and rear RACK rails - ventilation holes in the front door, top and bottom panel - possible mounting of a fan unit in the top panels - RAWP (max. 2 pcs.) - cable ducts in the top and bottom panel - 4 casters without locks and 4 leveling feet included - possible assembly of a 100mm high plinth - RAC166 - lockable front door (2 keys in set) - lockable rear door (2 keys in set) - side panel - lock assembly possible - RAZB16 - ready-to-assemble | | | |
| Declarations, warranty: | RoHS, 12 months from the date of purchase | | | |

3. Structure of the RACK cabinet.

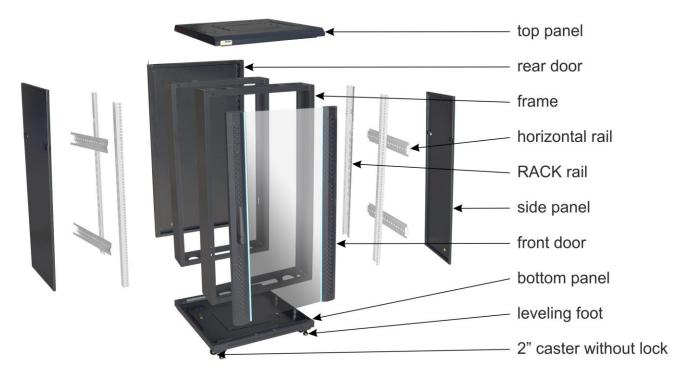

4. Components

| Num ber | Component | Amount | Foto | Num ber | Component | Amount | Foto |
|------------|-----------------------------------|--------|------|------------|-----------------------------|---------|------|
| 1 | Top panel | 1 pcs. | | 14 | "2" wheel without lock" | 4 pcs. | |
| 2 | Bottom panel | 1 pcs. | | 15 | Leveling foot | 4 pcs. | I |
| 3 | Front doors | 1 pcs. | | 16 | M8x12 Head Cap Screw | 16 pcs. | |
| 4 | Rear door | 1 pcs. | | 17 | M8 nut | 16 pcs. | |
| 5 | Side panel | 2 pcs. | | 18 | 10mm Torx (silver) | 65 pcs. | |
| 6 | Cabinet frame | 2 pcs. | | 19 | 10mm Torx (black) | 33 pcs. | |
| 7 | Horizontal rail | 4 pcs. | | 20 | M5 nut, spring washer | 2 pcs. | |
| 8 | RACK 19" 15U rail | 4 pcs. | | 21 | Spacer for front/rear doors | 2 pcs. | |
| 9 | Cable gland end cup (upper) | 2 pcs. | | 22 | M6x12 Phillips screw | 44 pcs. | |
| 10 | Cable gland end cup (lower) | 2 pcs. | | 23 | M6 nut ("cage nut") | 44 pcs. | |
| 11 | Lock - rear doors | 1 pcs. | 00 | 24 | Plastic washer | 44 pcs. | 00 |
| 12 | Lock - front doors | 1 pcs. | | 25 | Torx /hex key | 1 pcs. | 7 |
| 13 | Side door distance | 4 pcs. | 6 | | ı | 1 | |

The free standing, ready-to-assemble RACK cabinet is delivered in 5 separate packages.

5.1) Place horizontally two RACK cabinet frames with both top and bottom plates. Pay attention to the grounding in the frame - as shown in the drawing



Bottom panel - back



Bottom panel - lens


5.2) Mount the top plate and bottom plate to the left and right frames of the RACK cabinet, respectively. Use M8X12 Head Cap Screws with M8 nuts (16pcs). Screw the cabinet **wheels** and **legs** to the bottom plate of the cabinet.




- **5.3)** Place the RACK cabinet vertically and mount:
- Cable gland end cups (up and down) Torx screw 10mm (black) 12pcs
- Side door distance Torx screw 10mm (black) 4pcs.







5.4) Inside the cabinet, install the cross profiles and RACK profiles from the inside (front and rear), as shown in the figure below.

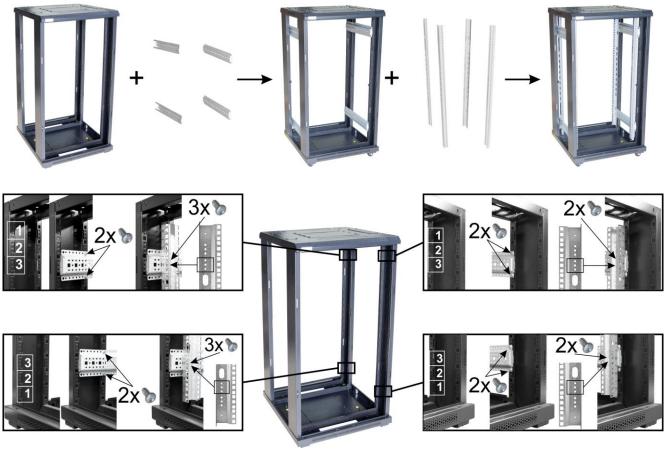


5.5) Installation of locks


Install locks in the front and rear doors - Torx screw 10mm (black) 4 pcs. - as shown below.



5.6) Installation of front, rear, and side doors

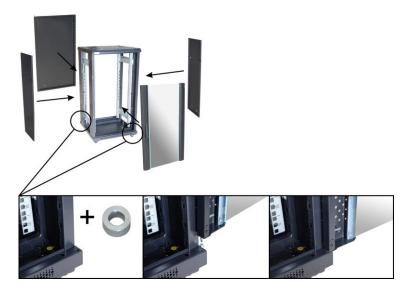




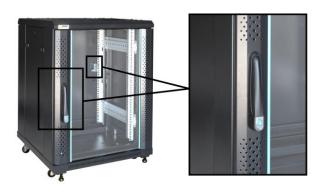









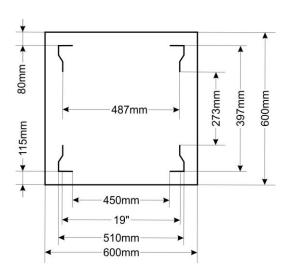

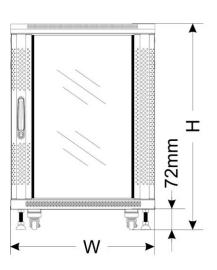

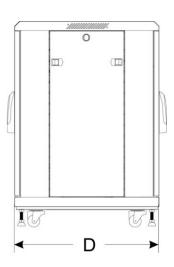

MANUFACTURER Pulsar

Siedlec 150, 32-744 Łapczyca

Tel. 14-610-19-40, Fax. 14-610-19-50 e-mail: biuro@pulsar.pl, sales@pulsar.pl http:// www.pulsar.pl, www.zasilacze.pl